
 










**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	i		Info / Angle
	Input Select		AV / Input / RDS
	Picture Size		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio I/II		Audio / Lang I/II
	0		0
	Guide (EPG)		Guide / EPG / -/--
	Menu		Menu / Home

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Return		Back / Return
	Left		Left
	Enter / CH List		Shift + OK
	Enter / CH List		OK
	Right		Right
	Mute		Mute / Dimmer
	Down		Down
	Subtitle		Subtitle / EQ
	Vol +		Vol+
	Freeze		Pause / Step / Freeze
	P +		CH+ / Page+
	Vol -		Vol-
	P ↔ P		Shift + Back / Return
	P -		CH- / Page-
	[≡]		Text / Goto
	[≡?]		Shift + Info / Angle





Originalfernbedienung Ersatzfernbedienung

	[≡⇕]	 + 	Shift + Text /
	TV		TV/Radio /
	Play / Pause	 + 	Shift + Play /
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	USB	 + 	Shift + 8
	Rec		Rec / Rec Mode
	I<< / Red	 + 	Shift + I<< / Preset-
	I<< / Red		I<< / Preset-
	<< / Green		<< / Tune-
	<< / Green	 + 	Shift + << /
	>> / Yellow		>> / Tune+
	>> / Yellow	 + 	Shift + >> /
	>>I / Blue	 + 	Shift + >>I / Preset+
	>>I / Blue		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung