 

 
 
 











 






Originalfernbedienung Ersatzfernbedienung

Stop		Stop / Hold
		Power
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0/AV		0
CH/TR-		CH- / Page-
CH/TR+		CH+ / Page+
Rec/OTR		Rec / Rec Mode
Play/Slow		Play / Slow
Up		Up





 

Originalfernbedienung Ersatzfernbedienung

PAUSE/STILL		Pause / Step / Freeze
<<		<< / Tune-
Left		Left
>>		>> / Tune+
Right		Right
Down		Down
ENTER		OK
INDEX		D.Menu / Top
CANCEL		Exit / Cancel / Clear
MENU		Menu / Home
Time Rec		Sleep / Timer
PROGRAM		Shift + TV/Radio / Program
CALL		Sound / Title
Clock/Counter		Shift + Sleep / Timer
COUNTER RESET		Setup / OPT /
Zero/Return		Shift + 0
Speed SP/LP		Picture / Format





Originalfernbedienung Ersatzfernbedienung

	TV/VCR		TV/Radio /
	Audio Select		Audio / Lang I/II
	Eject		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

