









 

 

 





 

 


 
 











Originalfernbedienung Ersatzfernbedienung


 
 
 

 
	Power		Power
	i		Info
	Input Select		AV
	Picture Size		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timer		Shift + AV
	Mute		Mute
	[≡o] [≡o]/P↔P		Back

Originalfernbedienung Ersatzfernbedienung

	Audio I/II		Dual
	[≡?]		Options
	[≡◇]		3D
	Menu		Menu
	[≡]		Text
	P+		Ch +
	Up		Up
	P-		Ch -
	Down		Down
	Vol+		Vol +
	Right		Right
	Vol-		Vol -
	Left		Left
	Enter/CH List		Ok
	Exit		Exit
	Freeze / [≡+]		Pre Ch
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue

