



































Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Audio		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Digest		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
R/L		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
DVD/TV		Smart / List
Slow Up		CH+ / Page+



**Originalfernbedienung Ersatzfernbedienung**

Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
C/CH		Fav / Marker / PC
Pbc		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

**Originalfernbedienung Ersatzfernbedienung**

Rep/A-B		Yellow / YouTube / Repeat
Random		Blue / Prime Video / Random
Resume		Shift + Play /
Karaoke/Step		Shift + Pause / Step /
Play/Back		Shift + << /
Lang		Shift + Audio / Lang I/II
Echo+		Shift + Up
Angle		Shift + Info / Angle
Echo-		Shift + Down
Shuffle		Shift + Blue / Prime

