





 

 





 

 





 









 
















 
 






 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	V-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	[G]		Guide / EPG / -/--
	i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Rakuten Tv		TV/Radio /
	twitch		Shift + Green / APP / Repeat





Originalfernbedienung

Originalfernbedienung		Ersatzfernbedienung	
	*1		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung

Originalfernbedienung		Ersatzfernbedienung	

