


 







 







 

 




 




 

 


 











 



 



 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Pause		Pause
	Recall		Back
	Menu		Menu
	Red / Sleep		Red
	Red / Sleep		Shift + Power

Originalfernbedienung Ersatzfernbedienung

	Green / List		Green
	Green / List		List
	Yellow / <<		Yellow
	Yellow / <<		<<
	Blue / >>		Blue
	Blue / >>		>>
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	9PIC		Media
	Audio		Dual
	TV / Radio		TV/R
	TV / VCR		AV
	N / P		3D





Originalfernbedienung    Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung		
	FAV		Pre Ch
	Text		Text
	EPG		Guide
	Subtitle		Subt
	Info		Info

Originalfernbedienung    Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

