 




 






 

 


 



 



 

 

 


 


 
 
 
 




 
 
 



 

 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Timer Fader		Media
	Display		Info
	PGM/Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	FM Mode BP		TV/R

Originalfernbedienung Ersatzfernbedienung

	C-Reset		Back
	Random		Subt
	Repeat		Text
	Preset EQ		Menu
	S.Virtualizer		Dual
	Auto Scan		Options
	Tape		Red
	Tuner		Green
	CD		Yellow
	REW/-		<<
	Stop		Stop
	FF/+		>>
	I<</Preset Tune/CD Slip		I<<
	>>I/Preset Tune/CD Skip Up		>>I
	Vol+		Vol +
	Vol-		Vol -

