







 

 


 

 

 


 







 

 

 



 
 
 


 


 
 
 

 
 
 

 
 
 
 




Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 I<< Track/Search	 I<<
 Track/Search >>I	 >>I
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1/Subtitle	 1
 2/Audio	 2
 3/Angle	 3
 4/Random	 4

Originalfernbedienung	Ersatzfernbedienung
 5/Scan	 5
 6/Repeat	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Aspect	 Format
 Game	 Smart
 DVD Menu	 D. Menu
 OSD/Track	 Text
 Title/Title Chapter	 Options

