



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep / Auto Off		Sleep
	Clock / Timer		AV
	Play / Rec		Rec
	Disc		Pre Ch
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>≡ 10		Guide
	Del		Exit

Originalfernbedienung Ersatzfernbedienung

	Program		Shift + Sleep
	Play Mode		Shift + Play
	Music Port		Media
	CD Play / Pause		Play
	Tape Play		Green
	USB Play / Pause		Yellow
	FM / AM		Red
	Stop / Clear		Stop
	Vol -		Vol -
	Vol +		Vol +
	Album -		Left
	Album +		Right
	I<</<</		I<<
	I<</<</		<<
	I<</<</		Down
	>>/>>/Up		>>I
	>>/>>/Up		>>





**Originalfernbedienung   Ersatzfernbedienung**

	>>  / >> / Up		Up
	Re-Master		Smart
	Manual EQ		Ch +
	D.Bass		Dual
	Display - Dimmer		Info
	Repeat		Text
	Preset EQ		Ch -
	Muting		Mute

**Originalfernbedienung   Ersatzfernbedienung**


