
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Picture		Picture / Format
	Input Tv		Shift + AV / Input / RDS
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	Text		Text / Goto
	STTL		Subtitle / EQ
	APPS		Fav / Marker / PC
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Home		Shift + Menu /
	Netflix		Shift + Red / Netflix /
	Left		Left
	Up		Up
	Right		Right
	Guide		Guide / EPG / -/--
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Option		Setup / OPT /
	Down		Down
	Back/Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5



