



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Power AV		Shift + Power
	Sleep		Sleep
	TV/AV		AV
	Band/Tuner		TV/R
	Double Re-Master		Smart
	Group		3D
	Repeat/MIX 2CH		Text
	Play Mode / P.Memory		Shift + Play
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	-/_/+10		Guide
	Cancel		Exit
	I<< Skip		I<<
	Skip >>I		>>I
	<<		<<
	Scan/Saerch		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		D. Menu
	Menu / Play List		Menu
	Menu / Play List		List
	Up		Up
	Left		Left


 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	Vol-		Vol -
	Vol+		Vol +
	Muting		Mute
	C.S.M.		Red
	Dolby/PL II		Subt
	Subwoofer		Format
	RDS / Fl.Display		Blue
	Audio Only		Dual
	C.Focus		Rec
	S.F.C.		Green
	Setup / FM		Options
	CH Select		Ch +


 
 
 

 
 

**Originalfernbedienung    Ersatzfernbedienung**

	Test		Yellow
	Delay Time		Ch -





**Originalfernbedienung Ersatzfernbedienung**

 
	Power		Power
	Power AV	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10		Guide
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +
	Tv Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AV		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10/-/+		Guide
	I<</CH-		I<<
	>>I/CH+		>>I
	<< Slow/Search		<<
	Slow/Saerch >>		>>

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Pause		Pause
	Play		Play
	Display		Info

