




















 


















**Originalfernbedienung Ersatzfernbedienung**

	On/Standby		Power
	Reset		Exit / Cancel / Clear
	Menu		Menu / Home
	Back		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Info		Info / Angle
	Screen		Picture / Format
	Video		4
	Preset		>>I / Preset+
	User		Setup / OPT /
	S-Video		3
	Brightness		Display / Media
	Image Adj.		D.Menu / Top

**Originalfernbedienung Ersatzfernbedienung**

	Component 1		1
	Contrast		Zoom / Size
	Color		Yellow / YouTube / Repeat
	Component 2		2
	Color Temp.		Text / Goto
	Sharpness		Red / Netflix / Search
	HDMI 1		Guide / EPG / -/--
	HDMI 2		0
	Logo		Green / APP / Repeat
	No Show		Blue / Prime Video / Random
	PC/Computer		Fav / Marker / PC
	Lamp Control		Smart / List
	Freeze		Pause / Step / Freeze

