



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power VCR		Power		Tracking/V-Lock-		Ch -
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Play		Play		5		5
	Stop		Stop		6		6
	>>		>>		7		7
	<<		<<		8		8
	Pause/Slow		Pause		9		9
	Rec/OTR		Rec		0		0
	Display		Info		-/--		Guide
	Zero Stop		Smart		Input Select		AV
	Jog/Shuttle On		Media		Vol+		Vol +
	I<< Index		I<<		Vol-		Vol -
	>>I Index		>>I		OSD		Back
	Tracking/V-Lock+		Ch +		Audio Out		Dual





Originalfernbedienung   Ersatzfernbedienung


















 
 

 








 




	Tv/AV		Pre Ch
	TV CH+		Shift + Ch +
	TV CH-		Shift + Ch -
	Power Tv		Shift + Power
	<< Wheel		Shift + Left
	Wheel >>		Shift + Right
	Central Wheel >>		Shift + Up
	<< Central Wheel		Shift + Down
	Reset		TV/R
	Menu		Menu
	Exit		Exit
	Store		3D
	PDC/VPS		Blue
	SP/LP		Format
	Timer Rec		Red
	Check		Green
	Transmit		Yellow

Originalfernbedienung   Ersatzfernbedienung

	Nothing 1		Shift + AV
	Nothing 2		Shift + Format
	Direct Tv Rec		Options
	AV Link		Text
	Jog/Shuttle ▲		Shift + Media







 










 



 

 













Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power		
 Direct Tv Rec	 Options		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 0	 Guide		
 Vol+	 Vol +		
 Vol-	 Vol -		


 





**Originalfernbedienung    Ersatzfernbedienung**

	Power VCR		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	Pause/Slow		Pause
	Rec/OTR		Rec
	Display		Info
	Reset		TV/R
	Zero Stop		Smart
	Jog/Shuttle On		Media
	Jog/Shuttle ▲		Shift + Media
	I<< Index		I<<

**Originalfernbedienung    Ersatzfernbedienung**

	Index >>I		>>I
	Tracking/V.Lock+		Ch +
	Tracking/V.Lock-		Ch -
	OSD		Back
	Audio Out		Dual
	Input Select		AV
	Tv/AV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Tv CH+		Shift + Ch +
	Tv CH-		Shift + Ch -
	Direct Tv Rec		Options
	AV Link		Text
	Menu		Menu
	Exit		Exit
	Store		3D
	Nothing 1		Shift + AV
	Nothing 2		Shift + Format
	SP/LP		Format
	PDC/VPS		Blue
	Transmit		Yellow
	Power Tv		Shift + Power
	Timer Rec		Red

Originalfernbedienung Ersatzfernbedienung

	Check		Green

