


 
 

 

 


 
 

 

 

 



 
 



 











 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Radio/Tv		TV/R
	Internet		Smart
	Netflix		Media
	Rec		Rec
	Prog/Check		Sleep

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	<<		<<
	Pause		Pause
	>>		>>
	<<		<<
	Stop		Stop
	Exit		Exit
	i/Status		Info
	Return		Back
	Guide		Guide
	Function Menu		Menu
	Video Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left





 





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Option		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Drive Select		List
	Text		Text
	STTL		Subt
	+60s		3D
	-10s		Format
	Page/CH+		Ch +
	Page/CH-		Ch -
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	AV Input Tv		AV

Originalfernbedienung Ersatzfernbedienung

	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	Power Tv		Shift + Power

