



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio		Audio / Lang I/II
	VHS/DVD		Smart / List
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	Cancel / Reset		Exit / Cancel / Clear
	0		0
	>=10		Guide / EPG / >=10

Originalfernbedienung Ersatzfernbedienung

	Repeat		Green / APP / Repeat
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	REW / << Slow/Search		<< / Tune-
	FF / Slow/Search		>> / Tune+
	Stop		Stop / Hold
	Pause / Slow		Pause / Step / Freeze
	Play		Play / Slow
	Direct Navigator / Top Menu		D.Menu / Top
	Up		Up
	Play List / Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Exit / Return		Back / Return





Originalfernbedienung Ersatzfernbedienung

	VHS/DVD Power		Power
	Audio		Audio / Lang I/II
	VHS/DVD		Smart / List
	1		1
	2		2
	3		3
	CH+ / Tracking/V-Lock+		CH+ / Page+
	4		4
	5		5
	6		6
	CH- / Tracking/V-Lock-		CH- / Page-
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Cancel / Reset		Exit / Cancel / Clear
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/-- / >=10		Guide / EPG / -/--
	ShowView		D.Menu / Top
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	REW		<< / Tune-
	FF		>> / Tune+
	Stop		Stop / Hold
	Pause / Slow		Pause / Step / Freeze
	Play		Play / Slow
	Prog Play		Text / Goto
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down



