

 
 

 

 


 
 

 
 
 

 

 

 





 










 











 


 






 

 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Picture		Format
	Input Tv		TV/R
	Input AV		AV
	Menu		Menu
	Text		Text
	STTL		Subt
	List/Provider		List
	i		Info
	Exit		Exit
	Netflix		Media
	Home		Smart
	Guide		Guide
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down

 



**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	?/eHelp		Dual
	Last View		Pre Ch
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	My APP		Shift + Media
	Stop		Stop
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung