

 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------------------|--|---------------------------|
| | Picture Mode | | Picture / Format |
| | DVD Status | | Info / Angle |
| | Dubbing | | Yellow / YouTube / Repeat |
| | VHS/DVD | | Smart / List |
| | Quick Replay | | Red / Netflix / Search |
| | Group | | Zoom / Size |
| | P.Memory | | Fav / Marker / PC |
| | Return | | Back / Return |
| | AV Enhancer | | AV / Input / RDS |
| | Direct Navigator / Top Menu | | D.Menu / Top |
| | Play List / Menu | | Menu / Home |
| | Play Mode | | Shift + Play / |
| | REW / << Slow/Search | | << / Tune- |
| | FF / Slow/Search | | >> / Tune+ |
| | VHS/DVD Power | | Power |
| | Pause / Slow | | Pause / Step / Freeze |
| | CH- / Tracking/V-Lock- | | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------------|--|-----------------------|
| | CH+ / Tracking/V-Lock+ | | CH+ / Page+ |
| | Cancel / Reset | | Exit / Cancel / Clear |
| | -/-- / >=10 | | Guide / EPG / -/-- |
| | Play | | Play / Slow |
| | Up | | Up |
| | Left | | Left |
| | Enter | | OK |
| | Right | | Right |
| | Down | | Down |
| | Display | | Display / Media |
| | Setup | | Setup / OPT / |
| | Timer | | Sleep / Timer |
| | 0 | | 0 |
| | Audio | | Audio / Lang I/II |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |



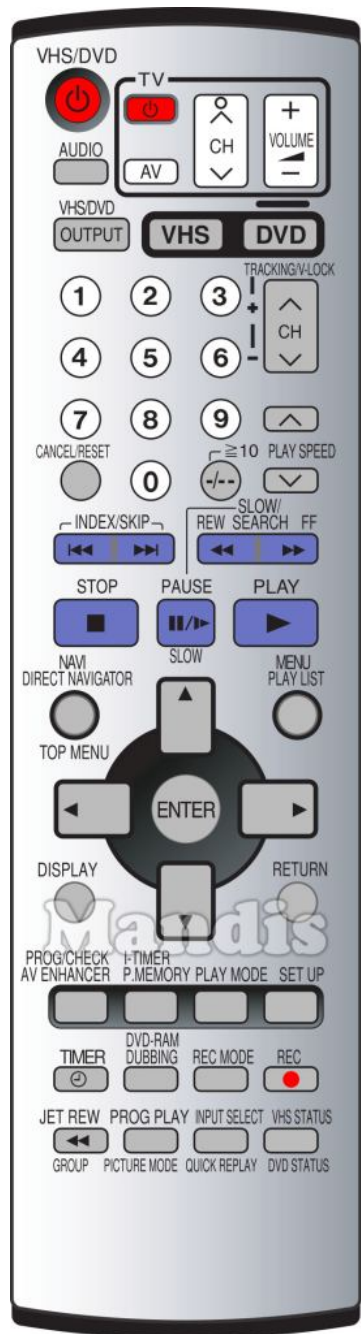


Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------|-----------|-------------|----------------|
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| INDEX/SKIP | I << Skip | PRESET- | I << / Preset- |
| SKIP | Skip >> I | PRESET+ | >> I / Preset+ |
| STOP | Stop | HOLD | Stop / Hold |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





 
 

 
 

 


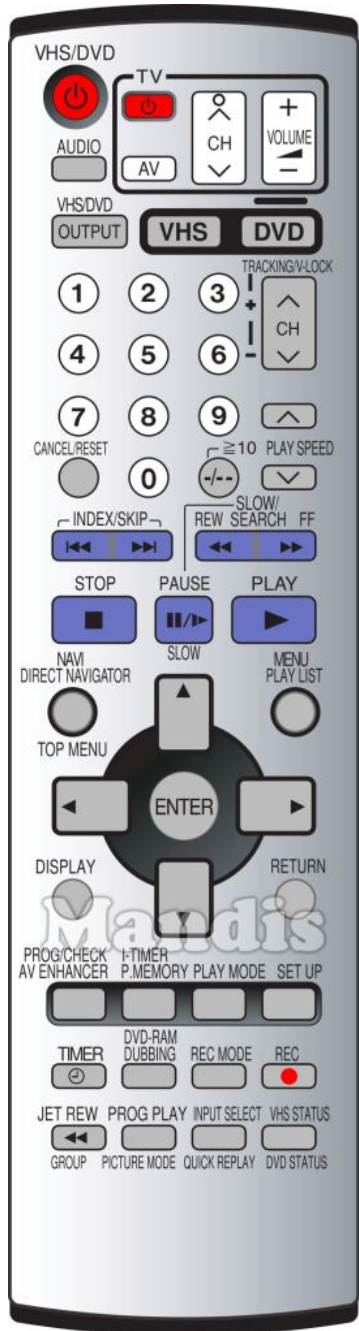


 
 

 
 





 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |







 
 
 



 



 












 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|---------------------------|
|  | Prog Play |  | Shift + Play / |
|  | I-Timer |  | Shift + Sleep / Timer |
|  | Cancel / Reset |  | Exit / Cancel / Clear |
|  | VHS/DVD |  | Smart / List |
|  | Display |  | Display / Media |
|  | VCR Status |  | Info / Angle |
|  | Dubbing |  | Yellow / YouTube / Repeat |
|  | Jet Rew |  | Shift + << / |
|  | Pause / Slow |  | Pause / Step / Freeze |
|  | CH+ / Tracking/V-Lock+ |  | CH+ / Page+ |
|  | CH- / Tracking/V-Lock- |  | CH- / Page- |
|  | VHS/DVD Power |  | Power |
|  | -/- / >=10 |  | Guide / EPG / -/- |
|  | Return |  | Back / Return |
|  | Prog/Check |  | TV/Radio / |
|  | I<< Index |  | I<< / Preset- |
|  | Index >>I |  | >>I / Preset+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------------------------|
|  | FF |  | >> / Tune+ |
|  | Play |  | Play / Slow |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Stop |  | Stop / Hold |
|  | Rec Mode |  | Shift + Rec / Rec Mode |
|  | Timer |  | Sleep / Timer |
|  | Rec |  | Rec / Rec Mode |
|  | 0 |  | 0 |
|  | Audio |  | Audio / Lang I/II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |



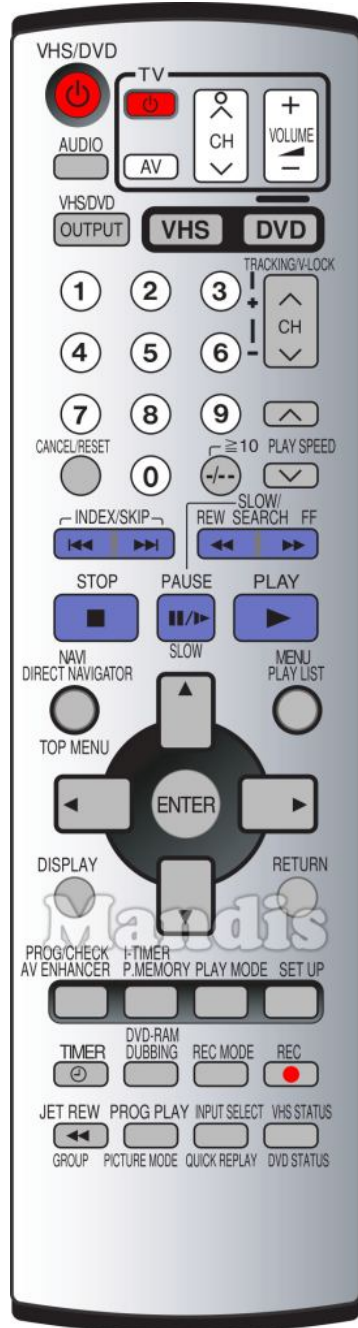

 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|-----------------------------|--------------|--------------|------------------|
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| Y INPUT SELECT QUICK REPLAY | Input Select | RDS AV INPUT | AV / Input / RDS |
| REW SEARCH | REW | TUNE- << | << / Tune- |

Originalfernbedienung Ersatzfernbedienung





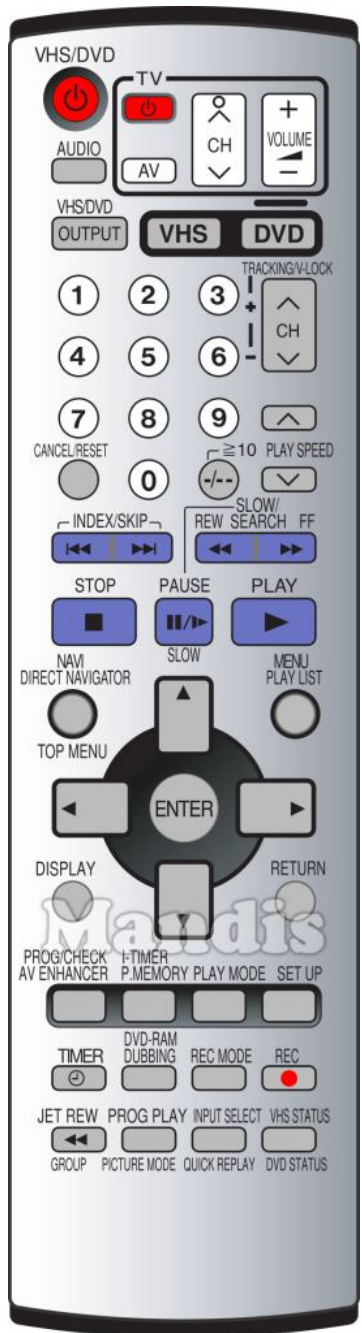

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung

Ersatzfernbedienung

| | | |
|---------|---|------------------|
| Power |  | Power |
| AV |  | AV / Input / RDS |
| Volume+ |  | Vol+ |
| Volume- |  | Vol- |
| CH+ |  | CH+ / Page+ |
| CH- |  | CH- / Page- |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Originalfernbedienung

Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

