

 





 





 






















 


































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto Off		Shift + Power
	Sleep		Sleep / Timer
	Muting		Mute / Dimmer
	1		1
	2		2
	3		3
	Disc		Display / Media
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/-
	7		7
	8		8
	9		9
	0		0
	Program		TV/Radio /

















Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Tape		Shift + 5
	CD		Shift + 3
	Tuner		Shift + 6
	AUX		Shift + 7
	EQ		Subtitle / EQ
	3D AI		Smart / List
	<<		<< / Tune-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	>>		>> / Tune+
	V.Bass		Sound / Title
	</▼		Left
	</▼		Down
	</▼		CH- / Page-





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Stop		Stop / Hold
	Play/Pause/▲		Play / Slow
	Play/Pause/▲		Right
	Play/Pause/▲		Pause / Step / Freeze
	Play/Pause/▲		Up
	Play/Pause/▲		CH+ / Page+
	Volume-		Vol-
	Volume+		Vol+

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------