



Originalfernbedienung Ersatzfernbedienung

	Power Tv	+	Shift + Power
	Tv/AV Tv	+	Shift + TV/Radio / Program
	Volume+ Tv		Vol+
	CH+ Tv	+	Shift + CH+ /
	Volume- Tv		Vol-
	CH- Tv	+	Shift + CH- /
	Power		Power
	OSD		Display / Media
	I< Index		I<< / Preset-
	Index >I		>>I / Preset+
	Timer Rec		Sleep / Timer
	Check		Smart / List
	Transmit		Subtitle / EQ
	Play		Play / Slow
	SP/LP		Picture / Format
	Audio Out		Audio / Lang I/II
	AV Link		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	<<		<< / Tune-
	>>		>> / Tune+
	4		4
	5		5
	6		6
	Stop		Stop / Hold
	7		7
	8		8
	9		9
	Input Select		AV / Input / RDS
	0		0
	-/--		Guide / EPG / -/--
	Menu		Menu / Home
	Up/Trackin/V-Lock		Up





Originalfernbedienung

Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Pause/Still		Pause / Step / Freeze
	Slow		Shift + Play /
	+		CH+ / Page+
	Left/Display		Left
	Store/Reset		OK
	Right/Zero Stop		Right
	Rec		Rec / Rec Mode
	-		CH- / Page-
	Down/Tracking/V-Lock-		Down

Originalfernbedienung

Ersatzfernbedienung

