 
 
 
 


 

 
 
 



 









 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	Source		AV
	[ ] / TV		TV/R
	[ <> ] / Format		Format
	Home		Smart
	Smart TV		Media
	List		List
	[i] / Info		Info
	Adjust		D. Menu
	Options		Options
	Back		Back


 
 

 

 

 

 



 



Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Exit
	Text		Text

Originalfernbedienung Ersatzfernbedienung