


 
 



 





 
 




Originalfernbedienung Ersatzfernbedienung

	RC / Remote		Smart
	M / Menu		Menu
	Power		Power
	F / Favourites		Pre Ch
	E / Exit		Exit
	i / Info		Info
	⊖ / Timer		Sleep
	⊖ / Timer		AV
	TV		TV/R
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Mute		Mute
	A / Audio		Dual
	R / Radio		Shift + TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

