



 
 
 



 

 



 
 
 
 


 


 





 

 
 

 




 

 
 
 
 



 

 
 

 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	[i+]		Info
	Split Screen		Options
	Split Screen Swap		3D
	PIP Swap		Shift + Back
	Tv/DTV		TV/R






 
 


 





 
 

 

 

 



 

Originalfernbedienung Ersatzfernbedienung

	P +		Ch +
	P -		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source Power		AV
	Return		Back
	Home		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Exit		Exit
	EPG / DVD Top Menu / Guide		Guide
	Red/Rec		Red
	Green/Pause		Green





Originalfernbedienung Ersatzfernbedienung









 
 




 

 






 

 
 







	Yellow/Stop		Yellow
	Blue/Play		Blue
	I<< / Subtitle		Subt
	>>I / [=?]		Eject
	<< / [=i]		List
	>> / Text		Text
	I-II / Disc Navi		Dual
	[>I<] / DVD		Sleep
	Size [<>] / HDD		Format
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5

Originalfernbedienung Ersatzfernbedienung

 

 

 


 
 
 


 
 



 




 

 
 


 

 







Originalfernbedienung Ersatzfernbedienung



 

 

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Source Power		AV
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	DVD Top		D. Menu
	Return		Back
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3







 


 
 

 

 



 

 


 

 
 











Originalfernbedienung	Ersatzfernbedienung
 Input 4	 +  Shift + 4
 Input 5	 +  Shift + 5

Originalfernbedienung	Ersatzfernbedienung



 

 

 
 
 
 
 



 







 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source Power		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	[i+]		Info
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -






 

 

 

 



 
 
 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	P +		Ch +
	P -		Ch -
	Menu		Menu
	Exit		Exit
	DVD Top Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5




 
 






 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source Power		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	P +		Ch +
	P -		Ch -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Play		Play
	Stop		Stop
	Pause		Pause
	Rec		Rec
	>>		>>
	<<		<<
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5

