

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | Standby / On |  | Power |
|  | BD |  | Shift + 5 |
|  | DVD |  | Shift + 2 |
|  | DVR / BDR |  | Shift + 7 |
|  | HDMI |  | Shift + 0 |
|  | TV |  | Shift + 1 |
|  | CD |  | Shift + 3 |
|  | NET |  | Shift + 9 |
|  | ADPT |  | Shift + Guide / EPG / -/- |
|  | iPod / USB |  | Shift + 8 |
|  | SAT / CBL |  | Shift + Fav / Marker / PC |
|  | MHL |  | Shift + 4 |
|  | TUNER |  | Shift + 6 |
|  | Input Select ↻ |  | CH- / Page- |
|  | Input Select ↻ |  | CH+ / Page+ |
|  | i / Status |  | Info / Angle |
|  | Volume+ |  | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-------------------------------|
|  | Volume- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Audio |  | Audio / Lang I/II |
|  | Up |  | Up |
|  | Video |  | Picture / Format |
|  | Tools Menu |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Home Menu |  | Menu / Home |
|  | iPod Ctrl. |  | D.Menu / Top |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Features PHASE |  | Red / Netflix / Search |
|  | Features ECO |  | Yellow / YouTube / Repeat |
|  | MPX |  | Shift + Pause / Step / Freeze |
|  | Pause |  | Pause / Step / Freeze |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | BAND |  | Shift + Play / |
|  | Play |  | Play / Slow |
|  | PTY |  | Shift + Stop / |
|  | Stop |  | Stop / Hold |
|  | Preset - |  | Shift + I<< / Preset- |
|  | I<< |  | I<< / Preset- |
|  | Preset+ |  | Shift + >>I / Preset+ |
|  | >>I |  | >>I / Preset+ |
|  | Tune- |  | Shift + << / |
|  | << |  | << / Tune- |
|  | Tune+ |  | Shift + >> / |
|  | >> |  | >> / Tune+ |
|  | Auto / ALC / |  | Subtitle / EQ |
|  | 1 |  | 1 |
|  | Standard |  | Smart / List |
|  | 2 |  | 2 |
|  | Adv. Surr. |  | Eject / Surround |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------------------|
|  | 3 |  | 3 |
|  | + Favorite |  | Fav / Marker / PC |
|  | Audio / THX |  | Sound / Title |
|  | 4 |  | 4 |
|  | Signal Sel. |  | TV/Radio / |
|  | MCACC |  | Zoom / Size |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | CH. Level |  | Text / Goto |
|  | Disp / Auto |  | Display / Media |
|  | 7 |  | 7 |
|  | Speakers |  | Shift + Audio / Lang I/II |
|  | Dimmer |  | Shift + Mute / Dimmer |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |
|  | Repeat |  | Green / APP / Repeat |



 
 
 


 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | Standby / On |  | Power |
|  | BD |  | Shift + 5 |
|  | DVD |  | Shift + 2 |
|  | DVR / BDR |  | Shift + 7 |
|  | HDMI |  | Shift + 0 |
|  | TV |  | Shift + 1 |
|  | CD |  | Shift + 3 |
|  | NET |  | Shift + 9 |
|  | ADPT |  | Shift + Guide / EPG / -/- |
|  | iPod / USB |  | Shift + 8 |
|  | SAT / CBL |  | Shift + Fav / Marker / PC |
|  | MHL |  | Shift + 4 |
|  | TUNER |  | Shift + 6 |
|  | Input Select ↻ |  | CH- / Page- |
|  | Input Select ↻ |  | CH+ / Page+ |
|  | i / Status |  | Info / Angle |
|  | Volume+ |  | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | Volume- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Audio |  | Audio / Lang I/II |
|  | Up |  | Up |
|  | Video |  | Picture / Format |
|  | Tools Menu |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Home Menu |  | Menu / Home |
|  | iPod Ctrl. |  | D.Menu / Top |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Features PHASE |  | Red / Netflix / Search |
|  | Features ECO |  | Yellow / YouTube / Repeat |
|  | MPX |  | Shift + Pause / Step / |
|  | Pause |  | Pause / Step / Freeze |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | BAND |  +  | Shift + Play / |
|  | Play |  | Play / Slow |
|  | PTY |  +  | Shift + Stop / |
|  | Stop |  | Stop / Hold |
|  | Preset - |  +  | Shift + I<< / Preset- |
|  | I<< |  | I<< / Preset- |
|  | Preset+ |  +  | Shift + >>I / Preset+ |
|  | >>I |  | >>I / Preset+ |
|  | Tune- |  +  | Shift + << / |
|  | << |  | << / Tune- |
|  | Tune+ |  +  | Shift + >> / |
|  | >> |  | >> / Tune+ |
|  | Auto / ALC / |  | Subtitle / EQ |
|  | 1 |  | 1 |
|  | Standard |  | Smart / List |
|  | 2 |  | 2 |
|  | Adv. Surr. |  | Eject / Surround |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------------------|
|  | 3 |  | 3 |
|  | + Favorite |  | Fav / Marker / PC |
|  | Audio / THX |  | Sound / Title |
|  | 4 |  | 4 |
|  | Signal Sel. |  | TV/Radio / |
|  | MCACC |  | Zoom / Size |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | CH. Level |  | Text / Goto |
|  | Disp / Auto |  | Display / Media |
|  | 7 |  | 7 |
|  | Speakers |  +  | Shift + Audio / Lang I/II |
|  | Dimmer |  +  | Shift + Mute / Dimmer |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |
|  | Repeat |  | Green / APP / Repeat |



