






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Last Memory		TV/Radio /
	Conditon		Zoom / Size
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Display		Display / Media
	Return		Back / Return
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<I/Step		CH- / Page-
	Slow I>		CH+ / Page+
	<</Rev		<< / Tune-
	>>/Fwd		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



