









 

 

 

 



 





















 

 



 
 
 

 

 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD Direct		3
	Muting		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+
	CD Disc		Eject / Surround
	CD Play		Play / Slow
	DAT		4
	GEQ On/Off		Subtitle / EQ
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	CD Pause		Pause / Step / Freeze
	CD Stop		Stop / Hold
	Deck I Rev Play		Left
	Deck I Play		Right
	Deck II Rev Play		Shift + Left
	Deck II Play		Shift + Right











 

 

 

 

 















Originalfernbedienung Ersatzfernbedienung

	Deck I <<		Down
	Deck I >>		Up
	Deck II <<		Shift + Down
	Deck II >>		Shift + Up
	PHONO		2
	Deck I Stop		OK
	DECK II Pause		Shift + Pause / Step /
	Deck II Stop		Shift + OK
	Shift		Setup / OPT /
	DECK II Rec		Shift + Rec / Rec Mode
	TUNER		6
	BAND		Smart / List
	MPX		Display / Media
	Tuning-		<< / Tune-
	Station-		CH- / Page-
	Station-		Shift + I<< / Preset-
	Tuning+		>> / Tune+









 

 

 

 

 
 












 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CD Direct		3
	Muting		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+
	CD Disc		Eject / Surround
	CD Play		Play / Slow
	DAT		4
	GEQ On/Off		Subtitle / EQ
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	CD Pause		Pause / Step / Freeze
	CD Stop		Stop / Hold
	Deck I Rev Play		Left
	Deck I Play		Right
	Deck II Rev Play		Shift + Left
	Deck II Play		Shift + Right

Originalfernbedienung Ersatzfernbedienung

	Deck I <<		Down
	Deck I >>		Up
	Deck II <<		Shift + Down
	Deck II >>		Shift + Up
	PHONO		2
	Deck I Stop		OK
	DECK II Pause		Shift + Pause / Step /
	Deck II Stop		Shift + OK
	Shift		Setup / OPT /
	DECK II Rec		Shift + Rec / Rec Mode
	TUNER		6
	BAND		Smart / List
	MPX		Display / Media
	Tuning-		<< / Tune-
	Station-		CH- / Page-
	Station-		Shift + I<< / Preset-
	Tuning+		>> / Tune+



