



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Nicam / A2		Shift + Smart
	Sleep		Sleep
	Aspect		Format
	USB / CR		Media
	Display		Shift + Info
	Auto		Smart
	P.Mode		Shift + Format
	S.Mode		Dual
	DTV		3D
	Source		AV
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	CH +		Ch +
	CH -		Ch -
	Info		Info





Originalfernbedienung	Ersatzfernbedienung
------------------------------	----------------------------

Power (Red), MUTE, SHIFT (Orange), TV, DVD, SAT, AUX, PLAY MODE, REC MODE, Play, Pause, Stop, Disc NAV, SOUND, AD, SETTINGS, LIST, DUAL, SUBT, OPT, PROG, SEARCH, PICTURE, ECO, SLEEP, TV/R, FORMAT, 3D, E-MANUAL, REPEAT, ZOOM, TIMER, D.MENU, TEXT, AV, TOP MENU, MENU, DISPLAY, INFO, OK, CLEAR, EXIT, RETURN, BACK, HOME, SMART, APP, MEDIA, + VOL, - VOL, + CH, - CH, 1, 2, 3, 4, 5, 6, 7, 8, 9, FAV, GUIDE, 0, PRE-CH, A (Red), B (Green), C (Orange), D (Blue), **Mandis** shop, www.mandis.tv