


**Originalfernbedienung Ersatzfernbedienung**

	Power Blue		Shift + Power
	POWER Red		Power
	RED / F1		Red
	GREEN / F2		Green
	YELLOW / F3		Yellow
	BLUE / F4		Blue
	MUTE		Mute
	AV		AV
	Sound Mode		Dual
	SETUP		Options
	APP		Media
	TV		TV/R
	≡		Text
	KB		Guide
	I<<<		I<<<
	>>>I		>>>I
	<<<		<<<

**Originalfernbedienung Ersatzfernbedienung**

	>>		>>
	Home		Smart
	BACK		Back
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	: ≡		Menu
	i		Info
	VOL+		Vol +
	PLAY/PAUSE		Pause
	PLAY/PAUSE		Play
	CHAN.+		Ch +
	VOL-		Vol -
	STOP		Stop
	CHAN.-		Ch -




**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Format		Format
	0		0
	Recall		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**


