



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	F.List		Media
	RES		Smart
	Repeat		Text
	Capture		Format
	Book.M		3D

Originalfernbedienung Ersatzfernbedienung

	Book.J		Shift + 3D
	R.Skip		I<<
	REW		<<
	FWD		>>
	F.Skip		>>I
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	Menu		Menu
	Exit		Exit
	Info		Info
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right



 









Originalfernbedienung **Ersatzfernbedienung**

	Down		Down
	Volume+		Vol +
	Volume-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red / Audio		Red
	Red / Audio		Dual
	Green / Subt		Green
	Green / Subt		Subt
	Yellow / Text		Yellow
	Yellow / Text		Shift + Text
	Blue / Sleep		Blue
	Blue / Sleep		Sleep
	EPG		Guide
	FAV		Pre Ch
	SAT List		List
	Zoom		Eject

Originalfernbedienung **Ersatzfernbedienung**

	Option1		Options
	Option2		Shift + Options
	TV / Radio		TV/R
	TV / STB		AV

