

























 



 















 
















 




Originalfernbedienung Ersatzfernbedienung

Lang./Rewind		<< / Tune-
	 + 	Shift + Right
	 + 	Shift + Left
+		Sound / Title
Pers.		Eject / Surround
Interat		Picture / Format
Sys/Serv		D.Menu / Top
TV		TV/Radio /
Home Cinema		Smart / List
TV/SAT		AV / Input / RDS
Lang./Rewind	 + 	Shift + Audio / Lang I/II
Epg	 + 	Shift + Guide / EPG / -/--
Dev		>>I / Preset+
4ghi		4
5jkl		5
6mno		6
7pqrm		7

Originalfernbedienung Ersatzfernbedienung

8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
West		I<< / Preset-
3def		3
Freeze	 + 	Shift + Pause / Step / Freeze
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
H/V Play		Play / Slow
LNB F.Forward		>> / Tune+
Display		Display / Media



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Mute	 Mute / Dimmer	Back	 Back / Return
Opt?	 Setup / OPT /	Volume+	 Vol+
App	 +  Shift + Green / APP /	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Audio	 Audio / Lang I/II
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
Video	 +  Shift + 4	1. ?	 1
Text	 Text / Goto	2abc	 2
Zoom	 Zoom / Size		
Menu	 Menu / Home		
Menu Up	 Up		
PWR On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		

