
 




 
 
 



 
 

 


 
 



 

 











Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg		Guide	
Info		Info	
Opt?		Options	
Subt.List		Subt	
TV		TV/R	
Video		D. Menu	
Text		Text	
TV/SAT		AV	
Display	 + 	Shift + Info	
Menu		Menu	
Menu Up		Up	
Menu Down		Down	
Menu Right		Right	
Menu Left		Left	
OK Enter		Ok	
Exit		Exit	
Back		Back	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
0/10		0	



Originalfernbedienung		Ersatzfernbedienung	Originalfernbedienung		Ersatzfernbedienung
Red		Red			
Green		Green			
Yellow		Yellow			
Blue		Blue			

