






















Originalfernbedienung Ersatzfernbedienung



8		8
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
Volume-		Vol-
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

Blue		Blue / Prime Video / Random
Display		Display / Media
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Info / Angle
Return TV		TV/Radio /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
On/Off		Power
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return



Originalfernbedienung **Ersatzfernbedienung**

Volume+		Vol+
Chan.Up		CH+ / Page+

Originalfernbedienung **Ersatzfernbedienung**

