 
 
 





Originalfernbedienung Ersatzfernbedienung

|   |        |   |               |
|---|--------|---|---------------|
|    | Power  |    | Power         |
|    | SAT    |    | AV            |
|    | Mute   |    | Mute          |
|    | PGUP   |    | Shift + Ch +  |
|    | PGDN   |    | Shift + Ch -  |
|    | FAV +  |    | Shift + Right |
|    | FAV -  |    | Shift + Left  |
|    | Red    |    | Red           |
|    | Green  |    | Green         |
|    | Yellow |    | Yellow        |
|    | Blue   |    | Blue          |
|    | 1      |    | 1             |
|  | 2      |  | 2             |
|  | 3      |  | 3             |
|  | 4      |  | 4             |
|  | 5      |  | 5             |
|  | 6      |  | 6             |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |       |
|---|--------|---|-------|
|    | 7      |    | 7     |
|    | 8      |    | 8     |
|    | 9      |    | 9     |
|    | 0      |    | 0     |
|    | SUB    |    | Subt  |
|    | Audio  |    | Dual  |
|    | TV / R |    | TV/R  |
|    | Sleep  |    | Sleep |
|    | TXT    |    | Text  |
|    | RCL    |    | Back  |
|    | Menu   |    | Menu  |
|    | Info   |    | Info  |
|  | VL +   |  | Vol + |
|  | VL -   |  | Vol - |
|  | Up     |  | Up    |
|  | Right  |  | Right |
|  | Down   |  | Down  |





Originalfernbedienung Ersatzfernbedienung

|  |              |  |               |
|--|--------------|--|---------------|
|  | Left         |  | Left          |
|  | OK           |  | Ok            |
|  | CH +         |  | Ch +          |
|  | CH -         |  | Ch -          |
|  | EPG          |  | Guide         |
|  | FAV          |  | Pre Ch        |
|  | <<           |  | <<            |
|  | >>           |  | >>            |
|  | Pause        |  | Pause         |
|  | I<<          |  | I<<           |
|  | >>I          |  | >>I           |
|  | Rec          |  | Rec           |
|  | Play / Pause |  | Play          |
|  | Stop         |  | Stop          |
|  | USB          |  | Media         |
|  | MP3          |  | Smart         |
|  | JPEG         |  | Shift + Media |

Originalfernbedienung Ersatzfernbedienung

|  |           |  |              |
|--|-----------|--|--------------|
|  | PVR List  |  | List         |
|  | Still >I< |  | Shift + Stop |
|  | Zoom      |  | Eject        |
|  | Edit      |  | Options      |
|  | Exit      |  | Exit         |
|  | A-B       |  | Shift + Text |
|  | T.S.      |  | 3D           |
|  | GOTO      |  | D. Menu      |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |
|  |           |  |              |

