



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	PopUp Menu/Disc Menu		D.Menu / Top
	Home		Menu / Home
	Top Menu		Picture / Format
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	:≡		Smart / List
	:≡		Setup / OPT /
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	I<		I<< / Preset-
	Stop		Stop / Hold
	Eject		Eject / Surround
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
0	0
AUDIO	Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

