
 
















 









 
 




**Originalfernbedienung Ersatzfernbedienung**

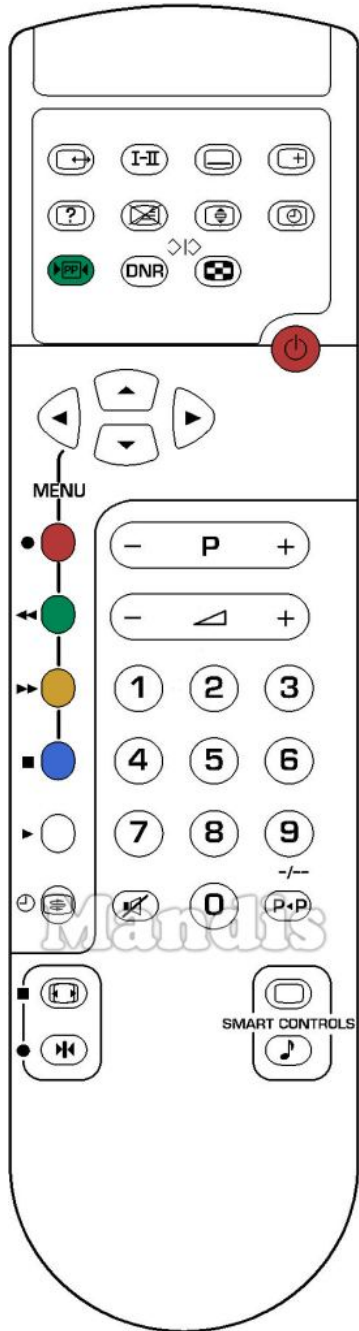
|   |           |   |              |
|---|-----------|---|--------------|
|    | Power     |    | Power        |
|    | ><>       |    | Shift + Menu |
|    | Source    |    | AV           |
|    | I - II    |    | Dual         |
|    | Subtitles |    | Subt         |
|    | [ i+ ]    |    | Info         |
|    | [ ? ]     |    | D. Menu      |
|    | Mix       |    | TV/R         |
|    | Zoom      |    | Eject        |
|    | Time      |    | Shift + AV   |
|  | [ PP ]    |  | Back         |
|  | DNR       |  | Options      |
|  | Mosaic    |  | Guide        |
|  | Up        |  | Up           |
|  | Down      |  | Down         |
|  | Right     |  | Right        |
|  | Left      |  | Left         |

**Originalfernbedienung Ersatzfernbedienung**

|   |                |   |                |
|---|----------------|---|----------------|
|    | Red / Menu     |    | Red            |
|    | Red / Menu     |    | Shift + Format |
|    | Green / Menu   |    | Green          |
|    | Green / Menu   |    | Shift + Dual   |
|    | Yellow / Other |    | Yellow         |
|    | Yellow / Other |    | Menu           |
|    | Blue / OK      |    | Blue           |
|    | Blue / OK      |    | Ok             |
|    | Special Audio  |    | Shift + Subt   |
|    | Text           |    | Text           |
|  | P -            |  | Ch -           |
|  | P +            |  | Ch +           |
|  | Vol -          |  | Vol -          |
|  | Vol +          |  | Vol +          |
|  | 1              |  | 1              |
|  | 2              |  | 2              |
|  | 3              |  | 3              |





 








 

 

 


 
 
 





**Originalfernbedienung Ersatzfernbedienung**

|   |             |   |              |
|---|-------------|---|--------------|
|    | Power       |    | Power        |
|    | Time        |    | TV/R         |
|    | Zoom        |    | 3D           |
|    | Mix         |    | Text         |
|    | [?]         |    | Shift + Info |
|    | [i+]        |    | Info         |
|    | Freeze/Rec  |    | Pause        |
|    | Format/Stop |    | Format       |
|    | Source      |    | AV           |
|    | I-II        |    | Dual         |
|  | Up          |  | Up           |
|  | Down        |  | Down         |
|  | Right       |  | Right        |
|  | Left        |  | Left         |
|  | Rec         |  | Rec          |
|  | <<          |  | <<           |
|  | >>          |  | >>           |

**Originalfernbedienung Ersatzfernbedienung**

|   |       |   |            |
|---|-------|---|------------|
|    | Stop  |    | Stop       |
|    | Play  |    | Play       |
|    | Timer |    | Shift + AV |
|    | P-    |    | Ch -       |
|    | P +   |    | Ch +       |
|    | 1     |    | 1          |
|    | 2     |    | 2          |
|    | 3     |    | 3          |
|    | 4     |    | 4          |
|    | 5     |    | 5          |
|  | 6     |  | 6          |
|  | 7     |  | 7          |
|  | 8     |  | 8          |
|  | 9     |  | 9          |
|  | 0     |  | 0          |
|  | -/-   |  | Guide      |

