




 



 






 



 




 

 














 

 
 







 



 


 

 
 
 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		List
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	PIC.Mode		Shift + Format

 
 




 

 


 
 

 

 

 


 

 
 

 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	S.Mode		Shift + Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Rec		Rec
	Timeshift		Options
	Timer		Shift + AV
	Rec.List		Media
	Red		Red
	Green		Green

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow
	Blue		Blue
	Aspect		Format
	Tv/Radio		TV/R
	Sleep		Sleep
	Subtitle		Subt
	Index		Guide
	Reveal		D. Menu
	Audio		Dual
	Display		Info
	Text		Text
	Play/Size		Play
	Pause/Subpage		Pause
	Stop/Hold		Stop
	I<<		I<<
	>>I		>>I
	<<		<<

**Originalfernbedienung    Ersatzfernbedienung**

	>>		>>

