


**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	TV / STB		AV
	Mute		Mute
	Recall		Back
	TTXT		Text
	Signal		Smart
	Capture		3D
	Subt		Subt
	Timer		Shift + AV
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	USB File		Media
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**

	Rec		Rec
	Menu		Menu
	Exit		Exit
	CH+ / PG+		Ch +
	CH- / PG-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Find		Shift + TV/R
	EPG		Guide
	Info		Info
	FAV		Pre Ch
	SAT List		List

 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	Mosaic		Format
	CH List	 + 	Shift + List
	TV / Radio		TV/R
	Feed		D. Menu
	Red / Pause		Red
	Red / Pause	 + 	Shift + Pause
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Audio		Yellow
	Yellow / Audio		Dual
	Blue / Sleep		Blue
	Blue / Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0

