



 





 
 
 




 


 

 
 









**Originalfernbedienung    Ersatzfernbedienung**


	Power		Power
	Eject		Shift + Eject
	Open/Close		Eject
	Display Call		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Channel+		Ch +
	Channel-		Ch -
	Showview/Progra		Guide

**Originalfernbedienung    Ersatzfernbedienung**

	Timer Rec		AV
	Rec OTR		Rec
	Marker/Tape		Options
	Jump/Zero Return		Pre Ch
	Clock/Counter		Yellow
	Counter Reset		Green
	Tv/VCR		TV/R
	VCR		Smart
	DVD		Media
	Setup Menu		Menu
	DVD Menu		D. Menu
	Up		Up
	Down		Down
	Right/TRK+		Right
	Left/TRK-		Left
	Enter/Select		Ok
	Title		Red



**Originalfernbedienung    Ersatzfernbedienung**

	Return		Back
	Stop		Stop
	Play		Play
	Pause		Pause
	I<</- Index/Skip		I<<
	<<		<<
	>>		>>
	>>I/Skip/Index +		>>I
	I>/Slow		Blue
	Cancel		Exit
	Repeat A-B		Text
	Zoom		3D
	Angle		List
	Play Mode		Shift + Play
	Subtitle		Subt
	Audio		Dual

**Originalfernbedienung    Ersatzfernbedienung**