 











 

 

 









 





 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	e		Info / Angle
	Mouse		Smart / List
	Home		Shift + Menu /
	TXT		Text / Goto
	Mix/FAV.List		Fav / Marker / PC
	Size/Subtitle		Subtitle / EQ
	Cancel/Audio		Audio / Lang I/II
	Record		Rec / Rec Mode
	<</Index		<< / Tune-
	>>/Hold		>> / Tune+
	I<</Reveal		I<< / Preset-

**Originalfernbedienung    Ersatzfernbedienung**

	>>I/Subpage		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Enter		OK
	Right		Right
	Play/Pause / Timeshift		Pause / Step / Freeze
	Play/Pause / Timeshift		Play / Slow
	Down		Down
	Stop / EPG		Stop / Hold
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Tv/Radio		TV/Radio /
	CH-		CH- / Page-





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

<b>1</b>	1	<b>TV</b>	1
<b>2</b>	2	<b>DVD</b>	2
<b>3</b>	3	<b>CD - STB</b>	3
<b>4</b>	4	<b>VIDEO</b>	4
<b>5</b>	5	<b>TAPE</b>	5
<b>6</b>	6	<b>TUNER</b>	6
<b>7</b>	7	<b>AUX - HDD</b>	7
<b>8</b>	8	<b>USB</b>	8
<b>9</b>	9	<b>BLUETOOTH</b>	9
<b>DISPLAY</b>	[ *]/Display	<b>MEDIA DISPLAY</b>	Display / Media
<b>0</b>	0	<b>HDMI - BAT</b>	0
<b>RECALL</b>	Recall	<b>RETURN BACK</b>	Back / Return