











 

 
 





 

 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC

 









 














 

 

 



Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Zoom / Size
	Freeze		Shift + Pause / Step / Step
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down

 

 





Originalfernbedienung    Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Text/CC		<< / Tune-
	<< / Text/CC		Text / Goto
	Play/Pause /		Pause / Step / Freeze
	Play/Pause /		Play / Slow
	>> / Reveal		>> / Tune+
	<< / Hold		<< / Preset-
	>>  / Size		>>  / Preset+
	Stop / Index		Stop / Hold
	Root		Setup / OPT /
	Repeat		Shift + Green / APP /
	List		Smart / List
	T.Shift		D.Menu / Top

Originalfernbedienung    Ersatzfernbedienung

	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/-

