
 




 






 



 






 

 
 

 




 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Opt?		Options	
Epg		Shift + Guide	
Info		Shift + Info	
App		Media	
Subt.List		Subt	
Sleep Timer		Sleep	
TV		TV/R	
Video		D. Menu	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9wxyz		9	
Guide Pilote		Guide	
0/10		0	
FAV Pref.		Pre Ch	
Red		Red	
West	 + 	Shift + I<<	
Freeze		Stop	
Green		Green	
Dev		List	
East	 + 	Shift + >>I	
Yellow		Yellow	
Dec/Pause		Pause	
LNB F.Forward		>>	
H/V Play		Play	
Lang./Rewind		<<	
Blue		Blue	
		>>I	

