 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | iPod Menu |  | Menu / Home |
|  | Menu Up |  | Up |
|  | Source |  | AV / Input / RDS |
|  | I<< |  | I<< / Preset- |
|  | Enter |  | OK |
|  | >>I |  | >>I / Preset+ |
|  | Mem Time |  | TV/Radio / |
|  | Menu Down |  | Down |
|  | Play / Pause |  | Play / Slow |
|  | Treble + |  | CH+ / Page+ |
|  | Bass + |  | Right |
|  | Volume + |  | Vol+ |
|  | Treble - |  | CH- / Page- |
|  | Bass - |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|------|
|  | Volume - |  | Vol- |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

