 




 







 










 


 




 






 
 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Internet |  | Smart / List |
|  | Source |  | AV / Input / RDS |
|  | Lang |  | Audio / Lang I/II |
|  | Tv/Radio |  | TV/Radio / |
|  | Subtitle |  | Subtitle / EQ |
|  | LIB |  | Picture / Format |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | >> |  | >> / Tune+ |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Back |  | Back / Return |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | i |  | Info / Angle |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | P::P |  | Display / Media |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | FAV |  | Fav / Marker / PC |
|  | PR- |  | CH- / Page- |
|  | 1 |  | 1 |



