




 





 
 

 





 
 

 

 
 








 
 



 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV/YPbPr/VGA/Tv		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	I<<		I<<
	>>I		>>I
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Dn		Ch -
	<</Rew		<<
	>>/FF		>>
	Vol+		Vol +
	Vol-		Vol -
	Main Page		Menu
	Up		Ch +
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	Mute		Mute
	Movie		Red
	Music		Blue





Originalfernbedienung Ersatzfernbedienung

	Photo		Green
	File		Yellow
	Rotate		3D
	Display		Info
	Setup		Options
	Zoom		Eject
	Repeat		Text
	Slideshow		TV/R
	S-Time		Guide
	S-Mode		Pre Ch

Originalfernbedienung Ersatzfernbedienung

