



 


 


 
 
 
 
 


 






 

 
 

 
 
 
 
 


 

 

 
 
 
 
 
 
 
 


 

 

 
 
 

 


 

 
 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Menu		Menu
	Exit		Exit
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Audio / I/II		Dual
	Red		Red

**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Q.Menu		D. Menu
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	EPG		Guide
	YouTube		Media
	Vol +		Vol +
	Vol -		Vol -
	Source		AV
	Text		Text
	P +		Ch +





Originalfernbedienung Ersatzfernbedienung

	P -		Ch -
	List		List
	Netflix		Smart
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	<<		<<
	>>		>>
	>>		>>

Originalfernbedienung Ersatzfernbedienung




 
 


 



 



 

 

 



















**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Play		Play
	Pause / Mix		Pause
	Pause / Mix		Shift + Text
	Stop / Hold		Stop
	Size		Format
	<< / Timer		<<
	<< / Timer		Shift + Power
	I<< / Index		I<<
	>>I / Reveal		>>I
	>> / Cancel		>>
	>> / Cancel		Shift + Exit
	Info		Info
	Audio / I/II		Dual
	Text		Text
	Back / Del		Back


 



 






 

 




 

 




 


 
**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Settings		Options
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down





Originalfernbedienung   Ersatzfernbedienung

	Netflix		Media
	Vol +		Vol +
	Vol -		Vol -
	YouTube		Shift + Media
	Home / Source		AV
	Home / Source		Smart
	P +		Ch +
	P -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	List		List
	Q.Menu		Menu

Originalfernbedienung   Ersatzfernbedienung