


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	123 / keypad		Eject / Surround
	Extra		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Vol Up		Vol+
	Home / Hub		Smart / List
	CH Up		CH+ / Page+
	Vol Down		Vol-
	CH Down		CH- / Page-
	Play / Pause		Shift + Play /
	Mute		Mute / Dimmer
	Play		Play / Slow

**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	AD		Audio / Lang I/II
	AD / Subt.		Subtitle / EQ
	Picture		Picture / Format
	P.Size		Zoom / Size
	Sleep		Sleep / Timer
	Auto Prog		TV/Radio /
	Tools		Setup / OPT /
	TTX/MIX		Text / Goto
	Source		AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

Menu		Menu / Home
Info		Info / Angle
Exit		Exit / Cancel / Clear
CH List		Display / Media
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide		Guide / EPG / -/--
0		0
Fav CH		Fav / Marker / PC
Search	 + 	Shift + Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

Prime Video	 + 	Shift + Blue / Prime
Rakuten Tv	 + 	Shift + Green / APP /
Netflix	 + 	Shift + Red / Netflix /
Still	 + 	Shift + Pause / Step /
Dual I-II	 + 	Shift + Audio / Lang I/II
Add / Del	 + 	Shift + Eject / Surround
TV / DTV	 + 	Shift + TV/Radio / Program
E-Manual	 + 	Shift + OK
Media P.	 + 	Shift + Display / Media
-/--	 + 	Shift + Guide / EPG / -/--
PRE-CH	 + 	Shift + Fav / Marker / PC
Red		Red / Netflix / Search
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Green		Green / APP / Repeat

