



















 
 


 
 
 
 













 


 




 











 
 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_/-/-/Del		Guide
	CH List		List
	Mute		Mute
	Source		AV
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Home		Smart
	Magicinfo Player 1		Media
	Info		Info
	Tools		Options
	Exit		Exit
	Return		Back
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red/PC		Red
	Green/DVI		Green





Originalfernbedienung Ersatzfernbedienung

 Yellow/HDMI	 Yellow
 Blue/DP	 Blue
 Set IR Control	 Format
 Unset IR Control	 3D
 Lock	 Shift + Stop
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</ <<	 <<
 >>/>>	 >>

Originalfernbedienung Ersatzfernbedienung

