
 

 
 

 

 





 
 
 
 











 
 


 


 


 

 













 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Ch.List		List
	P +		Ch +
	P -		Ch -
	Media.P		Media
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red		Red
	Green		Green



