




 
 

 
 

 

 

 

 

 

 

 

 

 


 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TTX / Mix		Text
	TV / DTV		Shift + TV/R
	Guide		Guide
	CH. List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	APP		Media
	Pre-CH / Back		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Pre-CH / Back		Back
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	Source		AV
	Menu		Menu
	D.Menu		D. Menu
	Info		Info
	Exit		Exit
	Up		Up
	Left		Left
	Enter / OK		Ok
	Right		Right
	Down		Down
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Subtitle		Subt				
	P.Size		Format				
	Sleep		Sleep				
	P.Mode		Shift + Format				
	S.Mode		Shift + Dual				
	Dual I-II		Dual				
	TV / Radio		TV/R				
	ALT		Smart				
	Text		Shift + Text				
	PIP		Options				
	Still		Pause				
	PIP Swap		3D				

