

 
 
 

 

 

 

 

 

 

 

 
 
 
 
 

 
 
 





 

 



 
 


 
 
 

 

 
 



 


 
 






 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Bonusview		Media
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	l<<		l<<
	>>l		>>l

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Disc Menu		D. Menu
	Menu		Menu
	Popup / Title		Shift + Menu
	Popup / Title		List
	Tools		Options
	Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Smart HUB		Smart				
	Search		TV/R				
	Repeat		Text				
	TV Power		Shift + Power				
	TV Source		AV				
	TV Vol +		Vol +				
	TV Vol -		Vol -				
	TV Mute		Mute				
	TV CH +		Ch +				
	TV CH -		Ch -				

