





 

 

 

 



 

 

 















 

 

 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	HDMI		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Mute		Mute
	CH List		List

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Home		Smart
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Dual I-II		Dual
	Content		D. Menu
	3D		3D
	Alarm		TV/R
	P.Size		Format
	Subt.		Subt
	Enter		Ok
	<</ <<		<<
	Pause		Pause
	>>/>>		>>
	Play		Play
	Rec		Rec
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

